

## Mounting the Frisport Adjustable Tophat on your lavvo-tent.

First, roll out the tents fly and locate the top opening with its centerpoint and web bands that connect to the fly fabric.

Looking around the top edge of the fly, there are two eyelets opposite each other. Also there are two eyelets on the triangle on the tophat. When you clip on the tophat, make sure the eyelets on the fly are aligned with the one on the tophat. Start with the buckle directly under the eyelet and work your way around. A velcro patch under the center of the tophat corresponds with a matching velcro patch on the lavvos centerpoint. Join them. Erect the lavvo according to its manual.

The manual contains a drawing of how to string and knot the adjusting cords. The manual below is an additional help, with photos, to make it even easier. Read all of it before you start. There might be useful information at the end.


### Overview

1. Locate the two bundles of cord attached inside the tent.

2. Open the bundle, and thread the cord as shown under. Equally long ends. Both ends through the stringlock.

3. Pull both ends through the eyelet on the fly, from inside and out.

4. Locate the triangle on each side of the tophat. Fasten one end of the cord to the web loop as shown below.

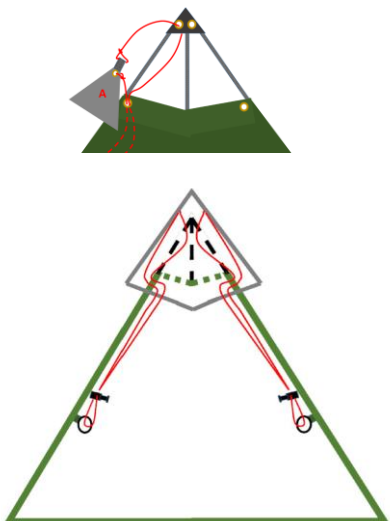

5. Pull the remaining cord end through the eyelet in the lavvos top/centerpoint. Inside and out.



6. Fasten the cord end to the eyelet on the tophat triangles as shown below.



The tophat is now mounted and ready for use. Here are some advice to make the process smoother:

The lavvo is high. As you mount and string the cord, it can help to slide the bottom of the pole to side and lower the top to reach it easier. Put the pole end back in the same position when you are finished.

The fabric stretches and shrinks slightly with air humidity and temperature. So it might be nessecary to tighten the buckles that attach the tophat for a nicer fit. We advice to tighten it nearly full, before pitching.

The tophat works even with a chimney. A small opening will still appear between tophat and the chimney, and in heavy rain a small amount of moist can slip through there. This is normal and expected on a lavvo.





## Feste topphatten og montere reguleringsnobrene

Pakk ut teltet og finn midtåpningen og senterpunktet der stangen skal møte duken i toppen

Om du ser rundt stoffkanten på midtåpningen, ser du to maljer med hull. Topphatten har tilsvarende maljer på hver side, på trekantede stoffbiten som regulerer åpningen. Pass på at disse to maljene står overfor hverandre når du begynner å klippe fast toppen. Start med spennen rett overfor ene maljen, og jobb deg rundt toppen. Inne i senter av topphatten er det en borrelås. Denne passer en borrelås på toppen av lavvoen. Fest disse sammen, reis så lavvoen i henhold til brukermanualen.

Brukermanualen inneholder en skisse på hvordan snorene skal tres og festes på topphatten. Denne veiledningen har i tillegg bilder, som noen synes er lettere. Les hele manualen før du starter, det kan være nyttige tips underveis.


### Oversikt

1. Finn de to bardunsnorene som er festet inne i teltet.

2. Løsne bunten og tre den som vist under. Like lange snor-ender

3. Før begge ender gjennom maljen i ytterduken, ved toppåpningen.

4. Finn stofftrekanten på hver side av topphatten, og knyt fast snoren i løkken i båndet under maljen, som vist på bildet.

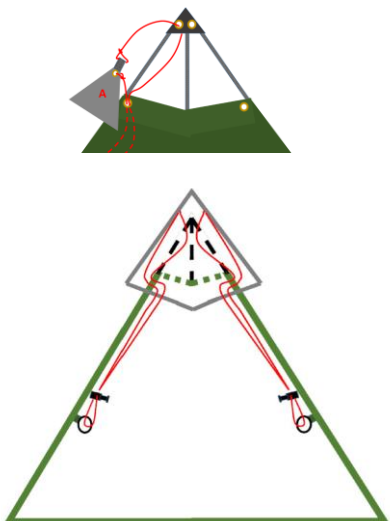

5. Dra den andre snorenden til toppen av lavvoen og ut gjennom maljen der.



6. Knyt fast snorenden i topphattens malje, på hver side. Topphatten og snorene er nå riktig knyttet og skal fungere bra.



Her er et par tips som kan hjelpe underveis:

Lavvoen er høy. Om man løsner nedre del av stange og sklir den litt til siden, senkes toppen. da når du den fin uten noe å stå på. Sett den tilbake når du er ferdig og teltet står like fint

Stoffet i lavvoen kan strekkes og krympes alt ettersom hvor fuktig eller tørt det er. Det kan derfor være lurt å stramme båndet på spennene som holder den til å begynne med, så topphatten sitter tett og pent.

Topphatten skal også kunne brukes og lukkes når man bruker ovn. Likevel vil det være en liten åpning inn mot ovnens pipe, der mindre mengder regn snø kan komme inn iblant. Det er ikke uvanlig og ikke en feil.

